


## How to Measure for a Single Gate Using Existing Posts

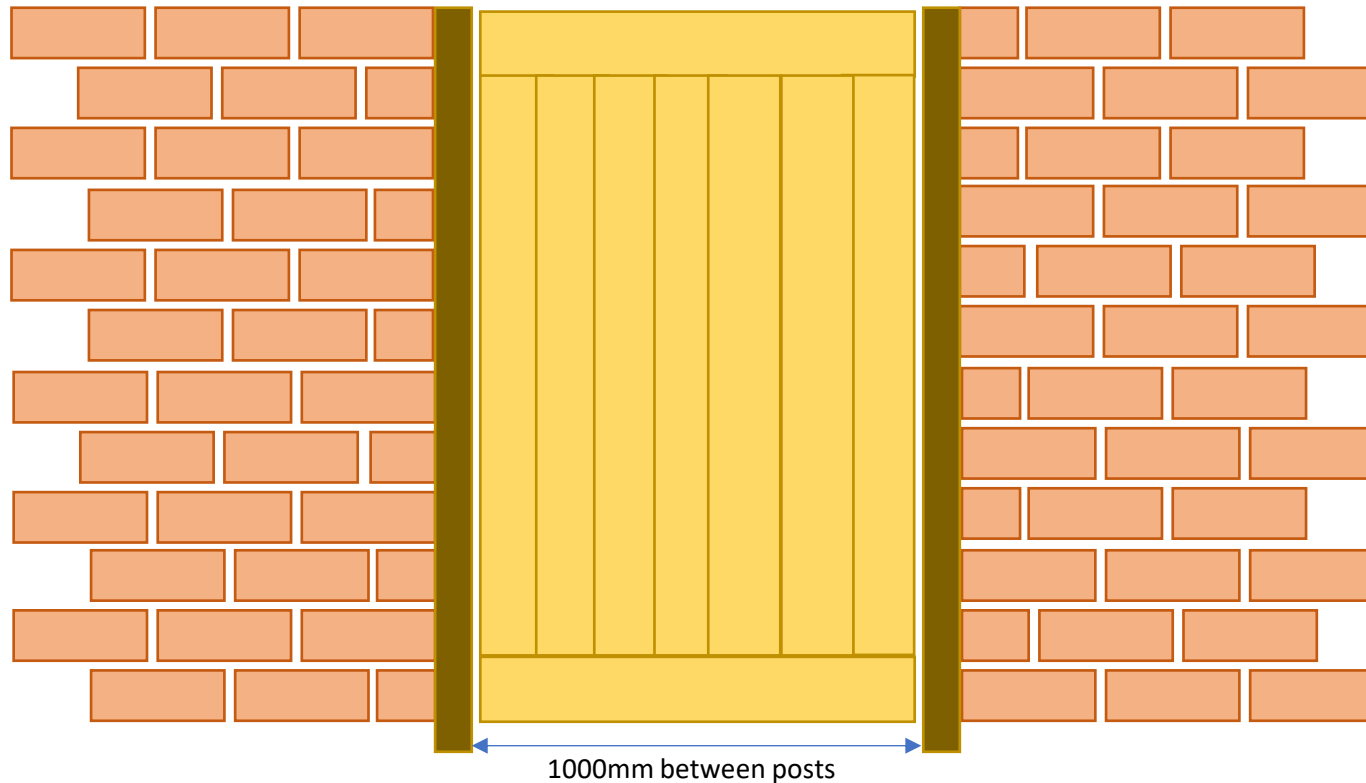

Firstly decide what height you would like your gate. We recomend allowing a 50mm ground clearance.

Measure the width between your existing posts. In this example it is 1000mm.

Calculation goes like this:  $1000\text{mm} - 10\text{mm (hinge and latch tollerance)} = 990\text{mm}$

This is the size gate you need to order - 990mm wide.

If opening out, hinges must be placed on the face of the posts. If opening inwards, then placed on the back of the posts. The calculation remains the same for either method.

10mm tollarance is what we advise but you can go slightly bigger just in case. Never go less than 10mm as the gate can swell in wet weather.