


How to Measure for a Single Gate Using New Gate Posts

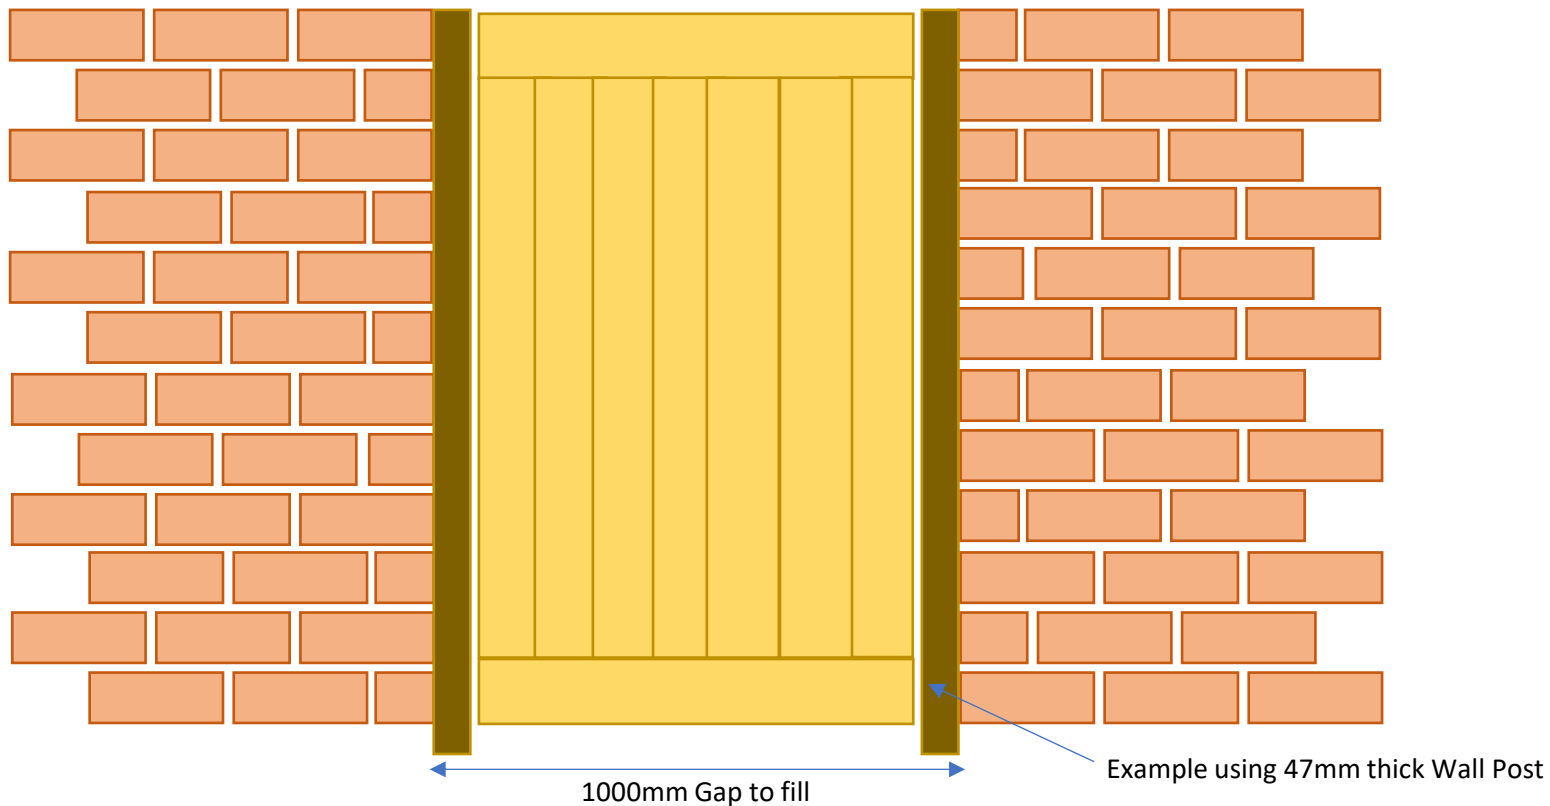

Firstly decide what height you would like your gate. We recomend allowing a 50mm ground clearence.

Measure the width of the gap you need to fill. In this example the gap is 1000mm.

Choose your size gate post or wall post. In this example we are using a 47mm thick wall post on both sides.

The calculation goes like this: $1000\text{mm} - 47\text{mm (left post)} - 47\text{mm (right post)} - 10\text{mm (hinge/latch tollerance)} = 896\text{mm}$.

This is the size gate you need to order - 896mm wide.

If opening out, hinges must be placed on the face of the posts. If opening inwards, then placed on the back of the posts. The calculation remains the same for either method.

10mm tollerance is what we advise but you can go slightly bigger just in case. Never go less than 10mm as the gate can swell in wet weather.