

3 Tier Raised Bed Kit



Use hex head provided to screw structural screws through the pre-drilled holes. There is only one hole on each section of wood. Make sure all prominent holes are on the outside, not inside of the bed. The colours indicate matching size timbers. Some layers may use 4 pieces the same size depending on size kit ordered.

Check which size kit you ordered.

1800 x 1800 x 375

Layer 1

Orange = 1730mm

Green = 1730mm

1800 x 900 x 375

Layer 1

Orange = 1730mm


Green = 830mm

1800 x 600 x 375

Layer 1

Orange = 1730mm

Green = 530mm

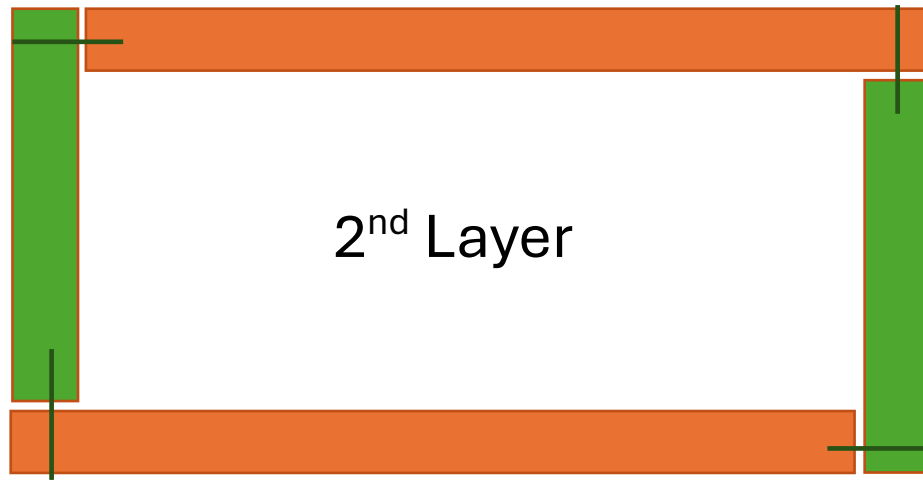

Follow the same instructions as the first layer.

Check which size kit you ordered.

1800 x 1800 x 375

Layer 2

Orange = 1130mm

Green = 1730mm

1800 x 900 x 375

Layer 2

Orange = 1130mm


Green = 830mm

1800 x 600 x 375

Layer 2

Orange = 1130mm

Green = 530mm

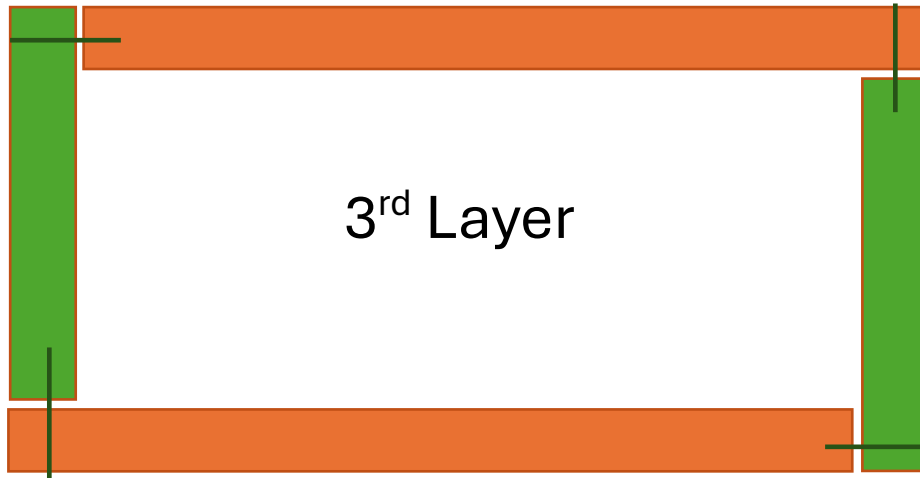

Follow the same instructions as previous layers. You should now have 3 finished boxes, each a third smaller than the previous layer assembled. Now stack the layers, largest at the bottom, smallest on the top. See below diagram for correct stacking. Once you're happy you have stacked each layer correctly, secure the 6 battens supplied with the nails provided on the inside which keep the layers secured together.

Check which size kit you ordered.

1800 x 1800 x 375

Layer 3

Orange = 530mm

Green = 1730mm

1800 x 900 x 375

Layer 3

Orange = 530mm

Green = 830mm

1800 x 600 x 375

Layer 3

Orange = 530mm

Green = 530mm

Side View Should Look Like This

