


# Corner Raised Bed Kit – 3 Layer

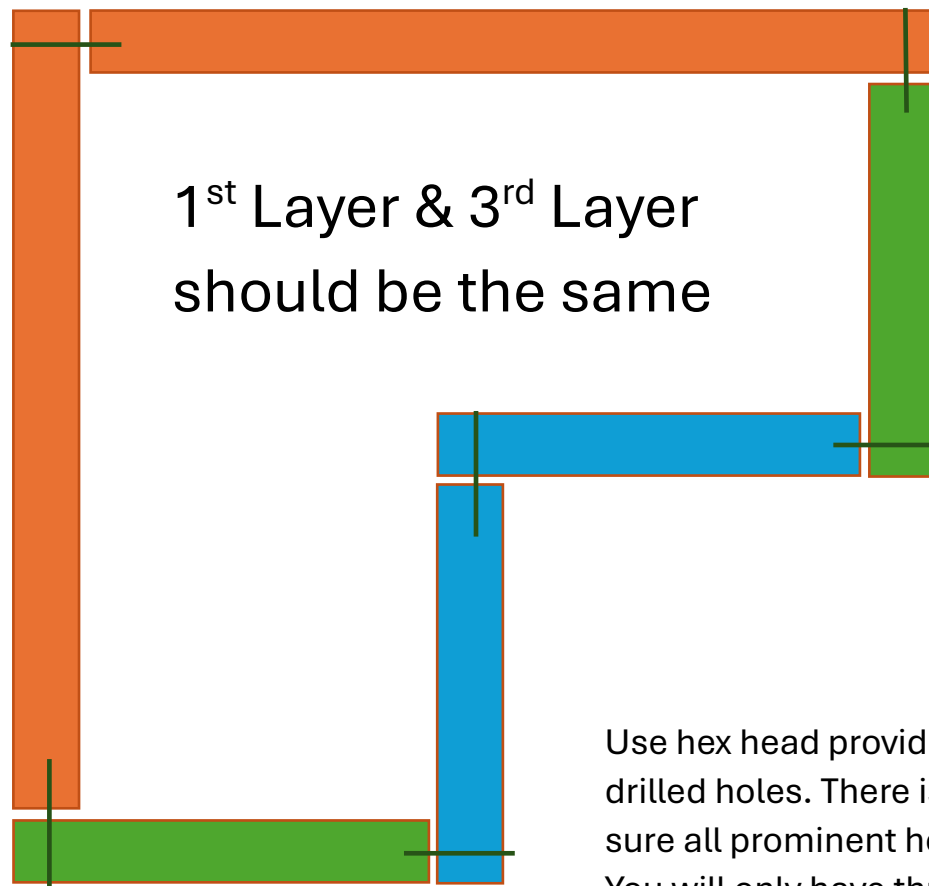

1<sup>st</sup> Layer & 3<sup>rd</sup> Layer  
should be the same

Use hex head provided to screw structural screws through the pre-drilled holes. There is only one hole on each section of wood. Make sure all prominent holes are on the outside, not inside of the bed. You will only have three different lengths of timber for each kit. The colours indicate matching size timbers.

Check which size kit you ordered.

## **1800 x 1800 x 900**

Orange = 1730mm

Green = 830mm

Blue = 900mm

## **1800 x 1800 x 600**

Orange = 1730mm

Green = 530mm


Blue = 1200mm

## **1200 x 600 x 600**

Orange = 1130mm

Green = 530mm

Blue = 600mm

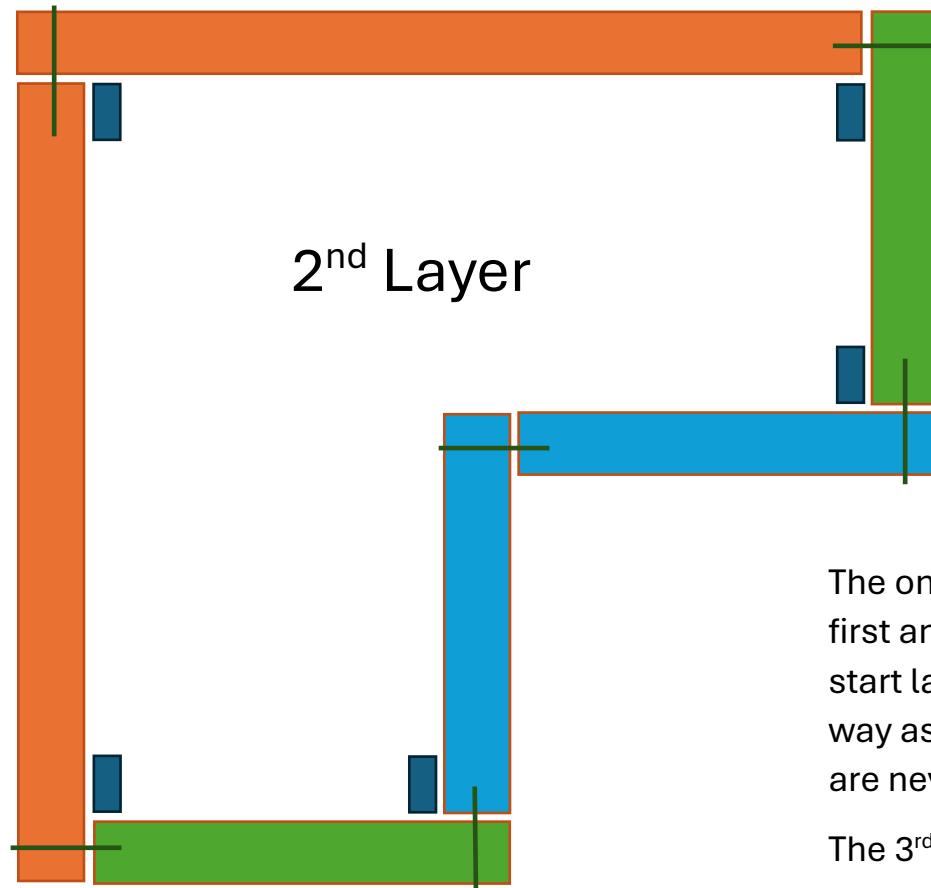

The only difference between the first and second layer is that you start laying them the opposite way as before so that the joins are never in the same place.

The 3<sup>rd</sup> layer should be assembled the same as the first layer. Once layer 1, 2 and 3 are stacked in place, use the 5 battens provided to secure on the inside of the raised bed to fix the layers together.