


Corner Raised Bed Kit – 4 Layer

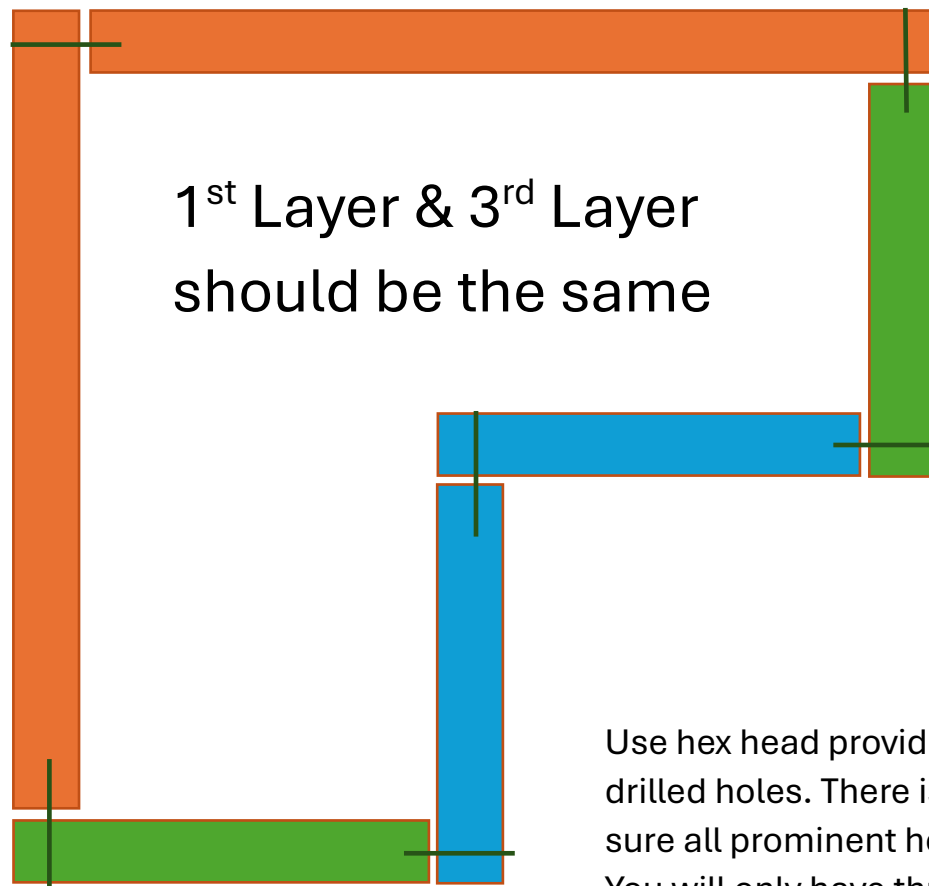

Use hex head provided to screw structural screws through the pre-drilled holes. There is only one hole on each section of wood. Make sure all prominent holes are on the outside, not inside of the bed. You will only have three different lengths of timber for each kit. The colours indicate matching size timbers.

Check which size kit you ordered.

1800 x 1800 x 900

Orange = 1730mm

Green = 830mm

Blue = 900mm

1800 x 1800 x 600

Orange = 1730mm

Green = 530mm


Blue = 1200mm

1200 x 600 x 600

Orange = 1130mm

Green = 530mm

Blue = 600mm

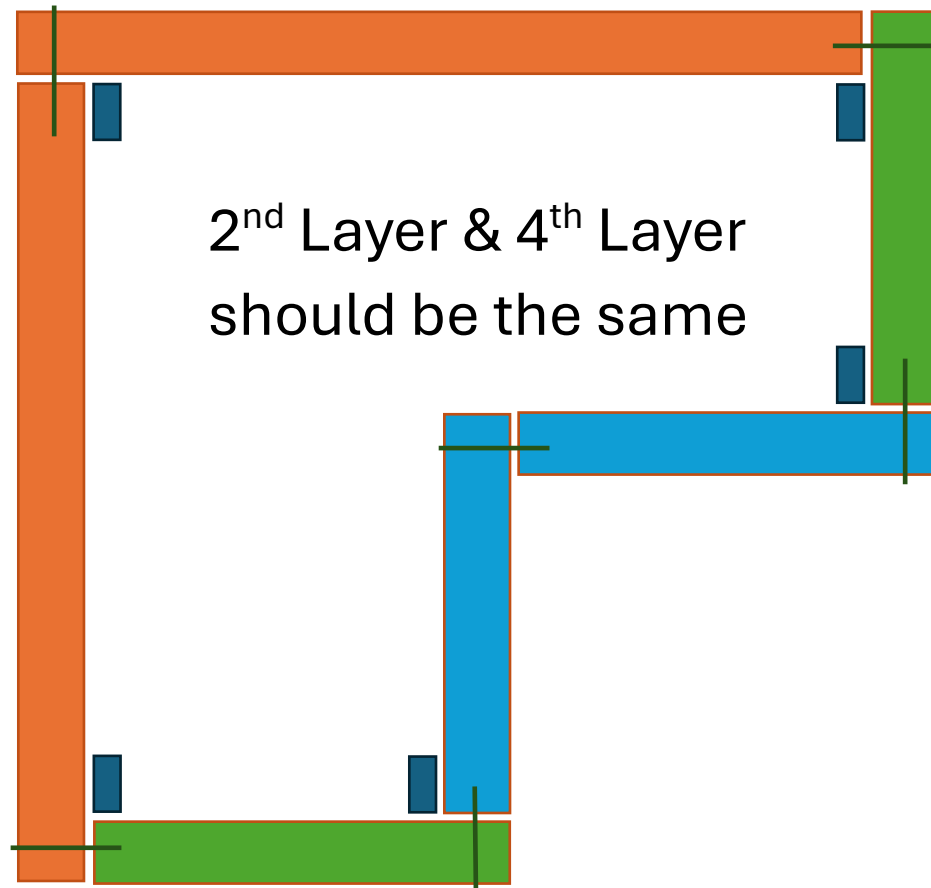

Layer 1 and 3 should be made the same, layer 2 and 4 should be made the same. The difference between them is that you start laying them the opposite way as before so that the joins are never in the same place.

Once layer 1, 2, 3 and 4 are stacked in place, use the 5 battens provided to secure on the inside of the raised bed to fix the layers together.